
DATA SHEET

VARNALUX

LED BACK-LIT PANEL 120X60 RGB+CCT

48W | MI-LIGHT

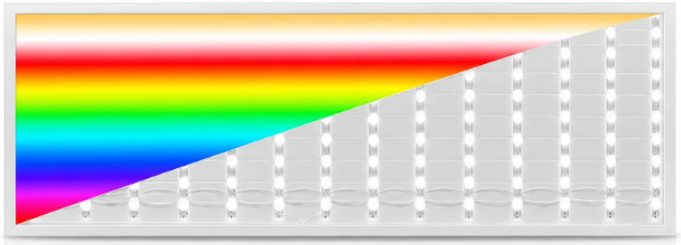

APPLICATION

- Hotels
- Factories and offices
- Commercial purposes
- Residential and institution buildings
- Schools, colleges and universities
- Hospitals

AVAILABLE MODELS	
Variant	REF No
RGB + 2800K–6500K	100451

120x60 Length	48W	4560 lm	5 YEARS
RGB+CCT Colour	DRIVER Control	- Class	WHITE Frame

DATA SHEET

LED BACK-LIT PANEL 120X60 RGB+CCT

48W | MI-LIGHT

GENERAL	
Product type	RGBWWW LED Panel Light
Material	Aluminium + PMMA + PS

ELECTRICAL DATA	
Power (consumption)	48W
Driver	Varnalux
Dimming	Yes
Input voltage	AC 100-240V, 50/60Hz
Cable length	150cm

PHOTOMETRICAL DATA	
Luminous flux	4560 lm
Colour temperature (Kelvin)	RGB + 2800K-6500K
Colour rendering index (CRI)	> 80
Beam angle	120°
LED brand	Sanan
LED type	SMD 5050 RGB / SMD 4014 CCT

LIFESPAN & WARRANTY	
Warranty	5 years

AVAILABLE MODELS

Variant	REF No
RGB + 2800K–6500K	100451

DATA SHEET

VARNALUX

LED BACK-LIT PANEL 120X60 RGB+CCT

48W | MI-LIGHT

INSTALLATION

STEP 1 **Unpack and check**

Check the integrity of the product when unpacking. Installation must be done by a trained electrician.

STEP 2 **Check the distances**

Keep at least 0.2 m from flammable materials and at least 2 cm between the top of the light and the ceiling. No heat-insulating material around the light.

STEP 3 **Choose the mounting**

In-built (recessed), mounting (surface) or suspending, as shown in the supplier drawings. Fix surface-mounted lights with the pre-fitted clips, securely.

STEP 4 **Lay the cables**

Guide the connecting cables through the drilled hole. No tensile or twisting force on cables and plugs; fit the tension relief; do not kink cables.

STEP 5 **Connect the driver**

After installation connect the driver to the mains supply. Lay the output cables separately from other cables.

STEP 6 **Wire the mains**

The brown wire is live: connect it to terminal L. The blue wire is neutral: connect it to terminal N.

STEP 7 **Driver rules**

Use only the LED driver included. Do not connect the panel to other loads and do not remove the name plate of the driver.

STEP 8 **Switch on**


Switch on the mains supply and check the light output.

DATA SHEET

LED BACK-LIT PANEL 120X60 RGB+CCT

48W | MI-LIGHT

CONNECTION DIAGRAM

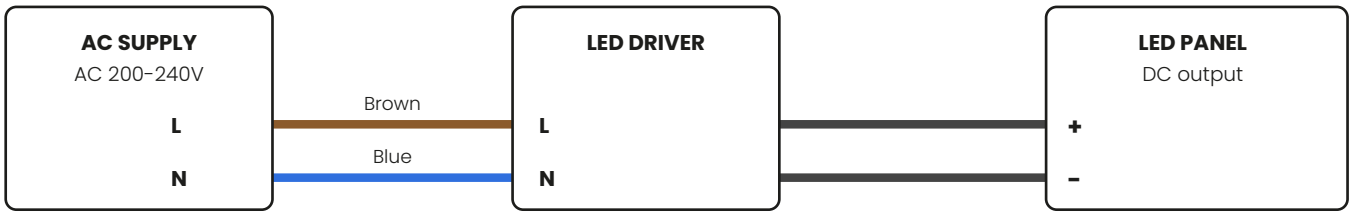

Use only the LED driver included with the panel.

SAFETY & MAINTENANCE:

- This product should be installed by trained electricians. Check the integrity of the product when unpacking it.
- Keep a distance of at least 0.2 m between the light and flammable materials and at least 2 cm between the upper part of the installed light and the ceiling.
- Do not install the light into ceilings or walls that contain heat-insulating material. The mains cable must not be connected with the low-voltage cable.
- Use only the LED driver included and do not connect the light to other loads. Do not remove the name plate of the power supply and the driver.
- Cleaning: disconnect the light from the power supply first. Use a dry or slightly moistened cloth; never use chemicals or abrasives.