DATA SHEET

VARNALUX

LED FLOODLIGHT PREMIUM 200W

PREMIUM | PHILIPS DRIVER | NON-DIMMABLE | IP66




APPLICATION

- Building exteriors and facades
- Warehouses and industrial areas
- Parking lots and construction sites
- Sports areas and large open spaces
- Outdoor and commercial lighting

AVAILABLE MODELS

Color Temp	REF No
3000K	100088
4000K	100089
6000K	100090

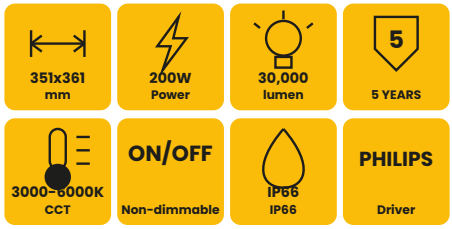





DATA SHEET

VARNALUX

LED FLOODLIGHT PREMIUM 200W

PREMIUM | PHILIPS DRIVER | NON-DIMMABLE | IP66

ELECTRICAL DATA	
Wattage (Consumption)	200W
Voltage	AC 200-240V
Max. current	1.0A
Operating voltage	DC 168V
Constant current	1.05A
Power factor	≥0.95
Dimming	Non-dimmable

PHOTOMETRICAL DATA	
Temperature (Kelvin)	3000K / 4000K / 6000K
Light color	Warm, neutral or cool white
Luminous flux (3000K / 4000K / 6000K)	28,000 / 30,000 / 30,000 lm
Luminous efficiency	140 / 150 / 150 lm/W
Beam angle	90°
Color Rendering Index (CRI)	> 80 Ra
LED type	SMD 2835
LED quantity	280 pcs
Operating temperature range	-20 °C to +55 °C

CAPABILITIES	
Dimmable	No (non-dimmable)
Mounting	Adjustable bracket, wall / ceiling / pole fixing
Cable	30 cm (pre-fitted)


LIFESPAN & WARRANTY	
Lifespan	50,000 hrs
Warranty	5 years

DIMENSIONS & PACKAGING	
Dimensions	351 x 361 x 68 mm
Net weight	4.9 kg
Gross weight	5.2 kg
Carton qty	4 pcs
Carton size	415×350×450 mm
Carton weight	21.6 kg

ADDITIONAL INFORMATION	
Driver	Philips LED driver
LED chip	SMD 2835
IP Rating	IP66
Class	Class I
Housing	Die-cast aluminium + toughened glass
Certification	CE, RoHS

AVAILABLE MODELS

Color Temp	REF No
3000K	100088
4000K	100089
6000K	100090

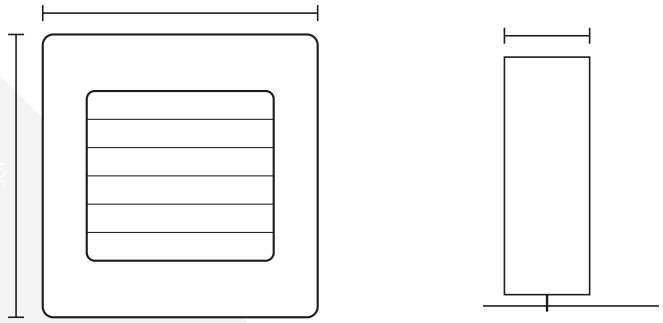

Schematic drawing, not to scale. Dimensions in mm (body excl. bracket)

DATA SHEET

VARNALUX

LED FLOODLIGHT PREMIUM 200W

PREMIUM | PHILIPS DRIVER | NON-DIMMABLE | IP66

USER MANUAL | HOW TO USE

STEP 1 **Turn off the power**

Switch off the power supply first and make sure the supply cable is not energized. Installation must be done by a professional electrician only.

STEP 2 **Choose the position**

Choose a stable mounting surface (wall, ceiling or pole) with enough free space around the luminaire for heat dissipation.

STEP 3 **Fix the bracket**

Mark and drill the fixing holes and secure the bracket with screws and plugs suitable for the surface and the weight of the floodlight.

STEP 4 **Connect the wires**

Connect the supply cable to the mains: L (live), N (neutral) and earth (Class I luminaire). Use a connection box suitable for outdoor use.

STEP 5 **Check the wiring**

Double check that the wiring is correct and that the cable entry is properly sealed before switching on, to keep the IP66 protection.

STEP 6 **Adjust the angle**

Loosen the bracket screws, aim the floodlight in the required direction and tighten the screws firmly again.

STEP 7 **Turn on the power**

Turn on the power supply and the floodlight starts to work.

STEP 8 **Maintenance**

Maintenance and repair must be done by trained professionals only. In case of damage to the power cable or the housing, stop using the luminaire.


DATA SHEET

LED FLOODLIGHT PREMIUM 200W

PREMIUM | PHILIPS DRIVER | NON-DIMMABLE | IP66

WIRING DIAGRAM

Non-dimmable version: this product cannot be used in dimming circuits.

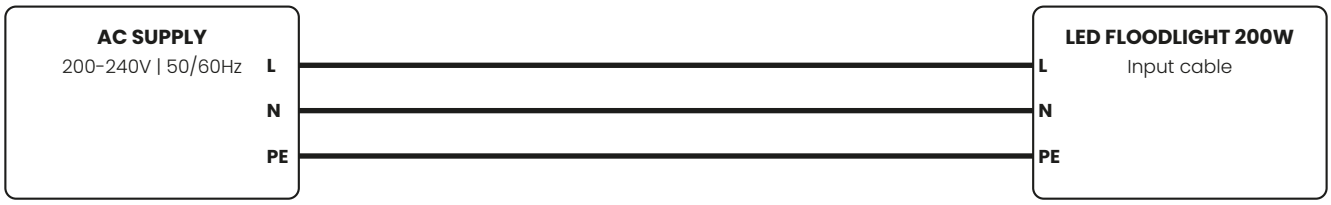

SAFETY NOTICE:

- Installation must be done by a professional electrician only; non-professionals must not install, disassemble or connect wires (high voltage).
- Before installation disconnect the power supply and never work with the power on.
- If there is any damage on the power cable or the housing, the product must not be used.
- Use the light out of its package and check it for transport damage before installation.
- Never cover the luminaire and keep it away from open flames and external heat sources.
- Do not use the product outside its operating temperature range: this can damage the lamp.
- Avoid looking directly into the LED beam, especially for extended periods. Do not shine the light in anyone's eyes.
- Keep packaging material away from children and pets (risk of suffocation, small parts). Never leave children unattended near the lights.
- Maintenance by trained professionals only. Unauthorised disassembly may void the after-sales service.
- After its service life the product needs an inspection or special treatment for disposal.
- Non-dimmable version: this product cannot be used in dimming circuits.